

## **WARNING ROL-A-LIFT SAFETY**

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

**⚠ WARNING:** This product can expose you to chemicals including naphthalene and benzene from petroleum products which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

### **IMPORTANT SAFETY RULES TO FOLLOW**

- Do not lift more than the rated capacity of the jack.
- Use the jack on hard, level surfaces only. Never use a jack on a slope or soft surfaces.
- Do not allow load to cock on jack, as jack may kick out causing injury to the operator or load to fall.
- Keep all body parts including arms, legs, fingers and toes clear of lifted load at all times.
- When using more than one jack to lift a load, each jack must have the lifting capacity of the entire load being lifted.
- Support raised loads with the appropriate supports never use the jack as the sole means of support.
- Keep lifted loads as low as possible and do not force extension screw past its safety stop.
- Remove the handle from the jack when not in use.
- Do not add weight to supported loads.

### **OPERATION**

#### **To raise the jack:**

1. Insert the end of the handle onto the release stem.
2. Turn the release stem clockwise completely to close the valve. Do not over tighten.
3. Insert the end of handle into the handle socket.
4. Pump the handle to raise the load.

#### **To lower the jack:**

1. Insert the end of the handle onto the release stem and turn slowly counter-clockwise to open the valve.

#### **WARNING**

**Slowly turn the release valve. Turning the release valve quickly makes the load fall rapidly and may lead to the loss of the load or damage to the jack!**

**Failure to comply may cause serious injury and/or property damage!**

2. Do not turn the release valve around more than two complete revolutions.
3. When storing the jack, retract the ram completely and wipe off any dirt, oil or other contaminants.

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. If there is any doubt as to the operation or safety of the equipment,

**DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!!**

**FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH**

# ROL•A•LIFT

---

## INSTRUCTIONS FOR OPERATION OF ROL-A-LIFT

1. Turn release valve on jack gently to right to close valve.
2. Place left foot firmly on bar between wheels---to hold ROL-A-LIFT in upright position against load. Be sure face plate (rubberized) is resting on load.
3. Operate pump with up and down motion, thus raising load.
4. Perform same operation on other end of load.
5. When moving load, do not walk directly behind ROL-A-LIFTS, just to the side is better.
6. When lowering, place left foot on bar between wheels and slowly turn release valve to left, gently, for safe lowering.
7. ROL-A-LIFTS are made with lifts to 6". This does not mean that loads should be lifted to this height. We do not recommend lifting loads more than necessary to clear floor, 1/2" to 1" is sufficient.

### IMPORTANT INSTRUCTIONS!

This jack is a fine piece of equipment of the very best material and workmanship. The service you get will be determined by the care you give it.

**TO RAISE:** Turn release valve firmly to the right. Insert handle onto socket and raise by pumping.

**TO LOWER:** Turn release valve slowly to left.

WHEN UPSET IN TRANSIT, NEW JACKS SOMETIMES BECOME AIR-BOUND CAUSING SPONGY RAM ACTION WHEN FIRST PUMPED. TO CLEAR EXCESS AIR, OPEN RELEASE VALVE AND PUMP HANDLE 12 TIMES

Do not overload the jack above the rated capacity.

Prevent "side-loading" – make sure load is centered on ram.

Do not push or tilt load off the jack.

Always keep ram extension screw retracted when jack is not in use.

**OIL:** Check oil when jack fails to rise to full height. Lower ram completely, with release valve open, and jack in upright position. Remove filler screw indicated by arrow and refill to level of filler hole with genuine hydraulic jack oil. NEVER USE BRAKE FLUID IN YOUR JACK.

**CAUTION: THIS JACK IS INTENDED FOR LIFTING ONLY. DO NOT GET UNDER A VEHICLE OR LOAD FOR ANY REASON, UNLESS IT IS PROPERLY SUPPORTED WITH SAFETY STANDS OR SECURELY BLOCKED.**